

# **BOSSVENT** INSTALLATION GUIDE



## Holden Colorado RG (2013-20) 2.8L TD Oil Catch Can Kit

<p><b>1. BOSSVENT MONO</b></p> 	<p><b>2. OUTLET HOSE</b></p> 	<p><b>3. INLET HOSE</b></p> 
<p><b>4. MOUNTING BRACKET</b></p> 	<p><b>5. OIL DRAIN KIT</b></p> 	<p><b>6. HARNESS KIT</b></p> 
<p><b>7. FASTENER KIT</b></p> 	<p><b>8. CABIN SWITCH</b></p> 	



## Holden Colorado RG (2013-20) 2.8L TD Oil Catch Can Kit

### STEP 1

**WARNING:** Ensure engine is off and cool enough to work on!

Identify install area (passenger side of engine bay).



### STEP 2

Remove engine cover.



### STEP 3

Install BossVent bracket using 2x M6 bolts, nuts and spring washers, as shown.





## Holden Colorado RG (2013-20) 2.8L TD Oil Catch Can Kit

### STEP 4

Attach oil drain tube to BossVent drain port, firmly push tube into place and tighten nut. Feed the the oil drain tube down the drive's side wheel arch.




### STEP 5

Mount catch can to bracket using 2x M8 bolts and spring washers, as show.



### STEP 6

Remove crankcase breather hose shown.

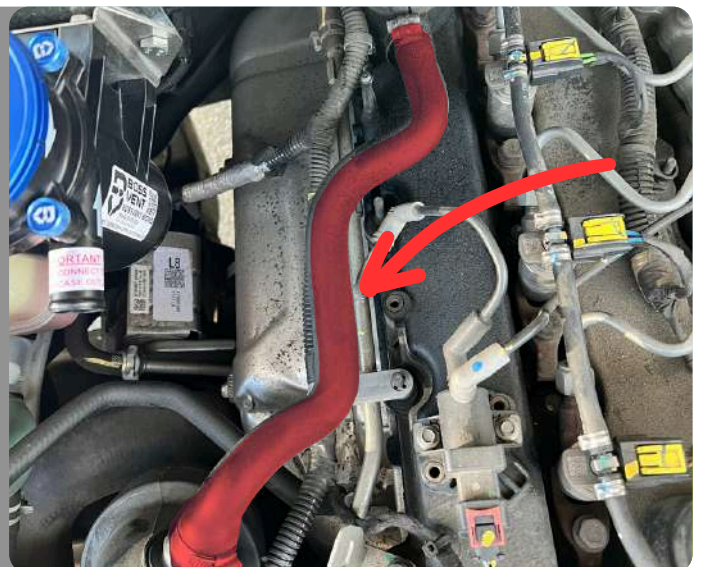





## Holden Colorado RG (2013-20) 2.8L TD Oil Catch Can Kit

### STEP 7

Install INLET and OUTLET hoses to the BOSSVENT.

**IMPORTANT:**

Match IN to IN hose and OUT to OUT hose locations, as shown.



### STEP 8

Route INLET / OUTLET hoses

- IN to the CRANKCASE
- OUT to the INLET MANIFOLD



### STEP 9



Refit all hose supports. Tighten all hose clamps, secure all hoses & ensure everything is secure and tidy.

Replace the engine cover.





## Holden Colorado RG (2013-20) 2.8L TD Oil Catch Can Kit


### STEP 10

Guide the drain tube past the engine on the driver's side to the front right wheel arch for bracket installation.



### STEP 11

Trim tube to length using cutter provided. Push firmly onto BossVent fitting and tighten nut. Ensure the tap is turned off.

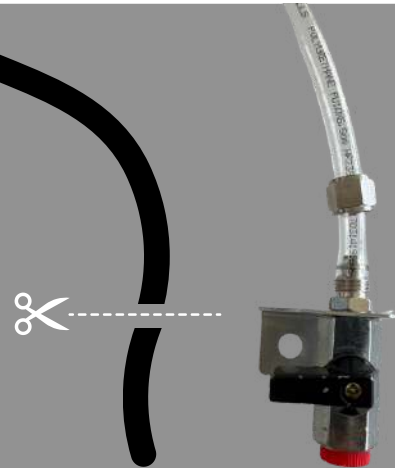

### STEP 12

Attach oil drain bracket onto existing location. Using 1x M6 bolt, nut and spring washer. Secure the drain tube with zip ties supplied.





## Holden Colorado RG (2013-20) 2.8L TD Oil Catch Can Kit

### STEP 13

Route the wiring harness around the engine, from the BossVent catch can to the passenger's side where the grommet is located.



### STEP 14

From the engine bay passenger's side pass the small plug and spade terminals through the firewall grommet to the passenger's side footwell. (Grommet shown for demonstration purposes only).



### STEP 14

Pull cable through grommet and connect engine bay side plug into the BossVent plug as shown.







## Holden Colorado RG (2013-20) 2.8L TD Oil Catch Can Kit

### STEP 16

Route wiring harness under dash to the cigarette lighter and zip tie into place.




### STEP 17

Remove the panel to access the cigarette lighter.



### STEP 18

Attach Scotchlok terminals cigarette lighter Pink or Green verify +12V to Red IGNITION (+12V) cable and White with black stripe verify -12V to NEGATIVE (-) cable.

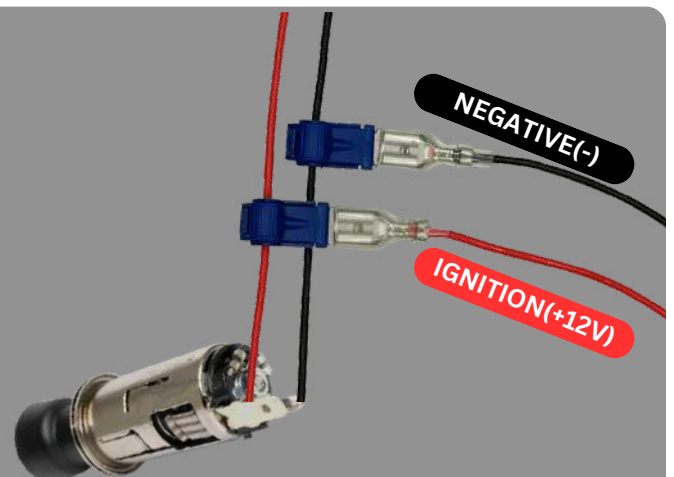




## Holden Colorado RG (2013-20) 2.8L TD Oil Catch Can Kit

### STEP 19

Clean the surface, place switch where is visible while you are driving. Use zip ties to tidy up loose cables and wiring harness.

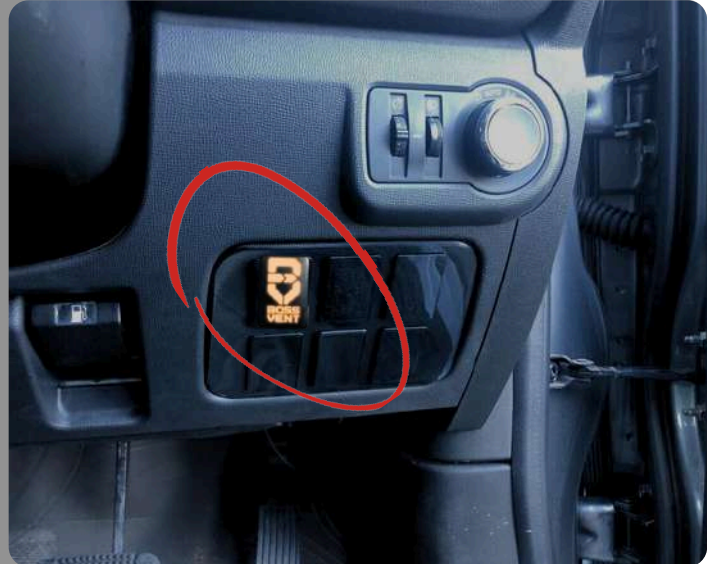

### STEP 20

Start the engine and inspect for leaks or loose ends.

**HOSES MUST HAVE NO KINKS OR OBSTRUCTIONS.**



**YOU'RE GOOD TO GO, MATE!**







# BOSSVENT

## IN-CABIN INDICATOR LIGHT STATUS

ONLINE VERSION



IGNITION TURNED ON

*Light will flash twice*

Status: Your catch can is being continuously monitored



NO LIGHT FLASH

Status: No maintenance required



1 FLASH PER SECOND

Status: Drain oil required!



2 FLASHES PER SECOND

Status: Replace filter elements required!



 [INFO@BOSSVENT.COM](mailto:INFO@BOSSVENT.COM)

 1800 935 936

BV205-LM-001A



# BOSSVENT

## MAINTENANCE GUIDE

ONLINE VERSION



### DRAIN OIL

Remove the red oil dust cap and open the tap.

Let the oil drain from your catch can.

Close the tap when oil stops and make sure you place the dust cap back once you finished.

[Click here for video instructions.](#)



### REPLACE FILTERS

Open the catch can, twisting all 6 thumbs screws.

Clean the sensor with some cloth.

Lubricate the new filters o-rings with some oil before inserting.

Changing the filter is easy. No tools are required!

YOU'RE GOOD TO GO, MATE!

